

CoolitPCB Installation Instructions

A copy of [Release Notes](#) can be viewed online and it will also be saved in your CoolitPCB/bin folder during installation. This version is backward compatible; it will read older case files, but the previous versions of CoolitPCB will not read new files.

To install, please follow these steps:

- 1) Download the installation [file](#). Have your company's login handy as you will be asked for your user name and password. The installation files is for all license types: node-locked, dongle-locked, and floating (network).
- 2) Make sure that no CoolitPCB components are running and then double click the downloaded **CoolitPCB_Setup.exe** to begin the installation. (You can install over previous versions of CoolitPCB, no need to uninstall.)
- 3)) If a new license server was released, network licensees should first [download](#) and install it and after that update their client installations.
- 4) If you need a license file:
 - Start CoolitPCB. It will show you the Registration dialog. Press Save ID file and email the resulting CompID.csi file to support@daat.com.
 - Once you receive a license.dat file, save it to your computer.
 - Click the Update button in the Registration dialog to open license.dat. Click OK to finish the registration.

Thank you for using CoolitPCB and we look forward to your comments at support@daat.com.

CoolitPCB Support Team