

Coolit Installation Instructions

A copy of [Release Notes](#) can be viewed online and it will also be saved in your Coolit/bin folder during installation. This version is backward compatible; it will read older case files, but the previous versions of Coolit will not read new files.

To install, please follow these steps:

- 1) Download the installation [file](#). Have your company's login handy as you will be asked for your user name and password. The installation file is for all license types: node-locked, floating (dongle), and network client.
- 2) Make sure that no Coolit components are running and then double click the downloaded **Coolit_Setup.exe** to begin the installation. (You can install over previous versions of Coolit, no need to uninstall.)
- 3) If a new license server was released, network licensees should first [download](#) and install it and after that update their client installations.

Thank you for using Coolit and we look forward to your comments at support@daat.com.

Coolit Support Team